

AC3


User Manual



DSP REMOTE

FEATURES

- 2 inch HD screen
- Colorful background lights
- Multilingual menu
- Master volume adjustment
- Subwoofer volume adjustment
- Scene select
- Sound effect select
- Shuffle/Sequence play
- Single repeat

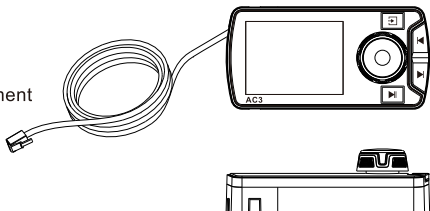


PRODUCT PARAMETERS

Supply Voltage	5V
Product Size	85(L)*43(W)*27(H)mm
Product Weight	Approx 0.08kg


ACCESSORIES LIST

AC3 Controller	1 pc
Manual	1 pc
Velcro	2 pcs


THE CONNECTION DIAGRAM

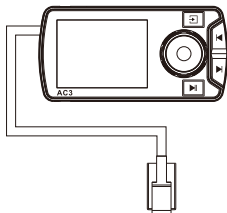


AC3 adapter models are as follows:
NDSK4065AU/NDSK4085AU/NDSK4165AU
NDSK4185AU/NDSR360A/NDSR260A
KALA100/KALA1000
Please look forward to more new models.

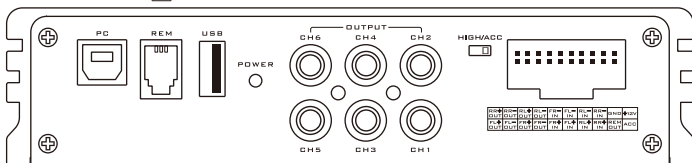


INSTRUCTIONS

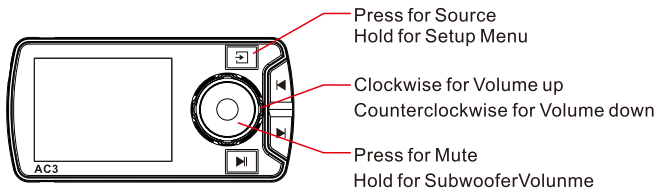


USB Playback :

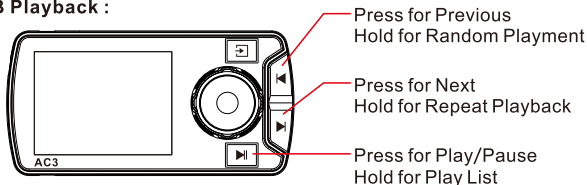

Bluetooth playback :

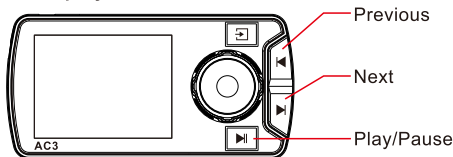

Setup menu or USB play list :

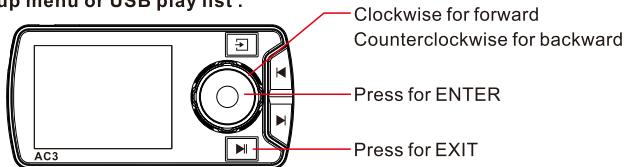

Note:

1. Hold means for more than 1 second press.
2. Play list is available for USB source only.

Source

Press[↵]for input source.

Note:

- 1.USB source is available only when USB disk has been recognized.
- 2.Bluetooth source is available only when BT has been connected.
- 3.Different models with different source.


Mute

Press the button in knob for Mute.



Language

- 1.Hold[↵]more than 1s for Setup menu.
- 2.Press ENTER to language menu.
- 3.Rotate the knob to select a language and press ENTER to select.
- 4.Press[▶||] for Exit.

 

Hold for more than 1s

Audio Effect

- 1.Hold[↵]more than 1s for Setup menu.
- 2.Select Audio Effect and press ENTER.
- 3.Rotate knob to select an effect.
- 4.Press[▶||] for Exit.



Hold for more than 1s

Volume Adjustment

Clockwise for Volume up
Counterclockwise for Volume down



Subwoofer Volume

- 1.Hold the button until Subwoofer menu is displayed.
- 2.Rotate the knob to adjust subwoofer volume.



Hold for more than 1s

Backlight Color setup

- 1.Hold[↵]more than 1s to Setup menu.
- 2.Select Backlight icon and press ENTER.
- 3.Rotate knob to select a color.
- 4.Press[▶||] for Exit.




Hold for more than 1s



Audio Scenes

- 1.Hold[↵]more than 1s for Setup menu.
- 2.Select Audio Scenes and press ENTER.
- 3.Rotate knob to select a scenes.
- 4.Press[▶||] for Exit.

 


Hold for more than 1s



產品特點

- 2寸高清液晶屏
- 支持多彩背光燈
- 支持多語言菜單及顯示
- 支持主音量調節
- 支持重低音音量調節
- 支持場景選擇
- 支持音效選擇
- 支持隨機/順序播放
- 支持單曲重複

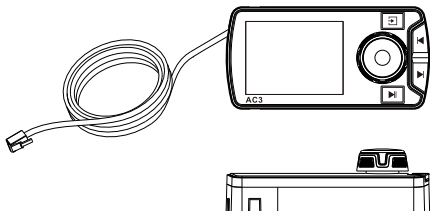


產品參數

供電電壓	5V
產品尺寸	85(長)*43(寬)*27mm(高)
產品淨重	約 0.08kg


配件清單

AC3線控器	1個
說明書	1本
魔術貼	1對


接線圖

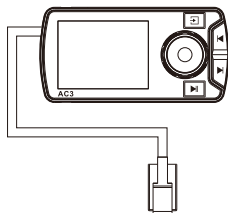


AC3適配型號如下:
NDSK4065AU/NDSK4085AU/NDSK4165AU
NDSK4185AU/NDSR360A/NDSR260A
KALA100/KALA1000
更多新的型號，敬請期待。

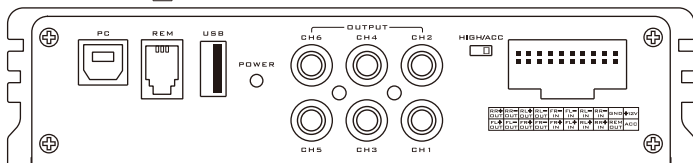


面板操作

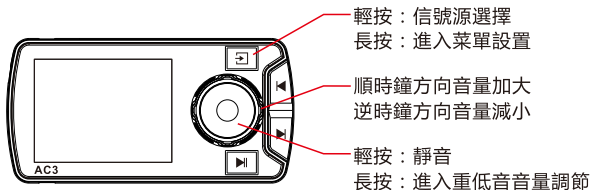


USB播放時：

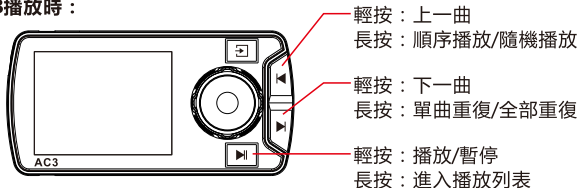

藍牙播放時：

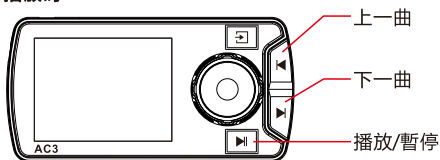

菜單設置及USB播放列表狀態時：

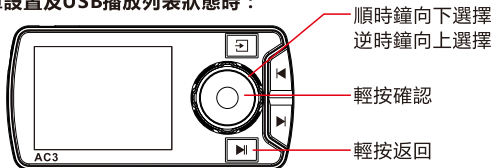

備註：

- 1.長按是指按住按鍵不鬆動1秒以上。
- 2.曲目信息只有在USB播放時才顯示，藍牙播放時無顯示。

信號源選擇

輕按[]鍵進行信號源選擇。

備註：

- 1.只有插上USB並識別到USB時才能切選擇USB狀態。
- 2.藍牙連接後才能選擇到藍牙狀態。
- 3.連接不同機型，信號源會不一樣。

靜音

輕按旋鈕中間鍵靜音。



語言設置

- 1.按住[]鍵1秒以上進入設置。
- 2.按確認鍵進入語言選擇。
- 3.調節旋鈕選擇語言,按中間鍵確認。
- 4.按[]退出設置。



按住1秒以上

音效設置

- 1.按住[]鍵1秒以上進入設置。
- 2.選擇音效，按確認鍵進入。
- 3.調節旋鈕選擇需要的音效。
- 4.按[]退出設置。



按住1秒以上



 
主音量調節

順時鐘音量加大
逆時鐘音量減小



重低音音量調節


- 1.按住中間鍵1秒以上屏幕顯示低音
- 2.調節旋鈕進行低音音量調節



按住1秒以上

燈光設置

 - 1.按住[]鍵1秒以上進入設置。
- 2.選擇按鍵背光，按確認鍵進入。
- 3.調節旋鈕選擇需要的背光顏色。
- 4.按[]退出設置。



按住1秒以上



場景設置

- 1.按住[]鍵1秒以上進入設置。
- 2.選擇場景，按確認鍵進入。
- 3.調節旋鈕選擇需要的場景。
- 4.按[]退出設置。



按住1秒以上



